 


# /DEEJAY SHOTGUN.

## MAIN PARTS

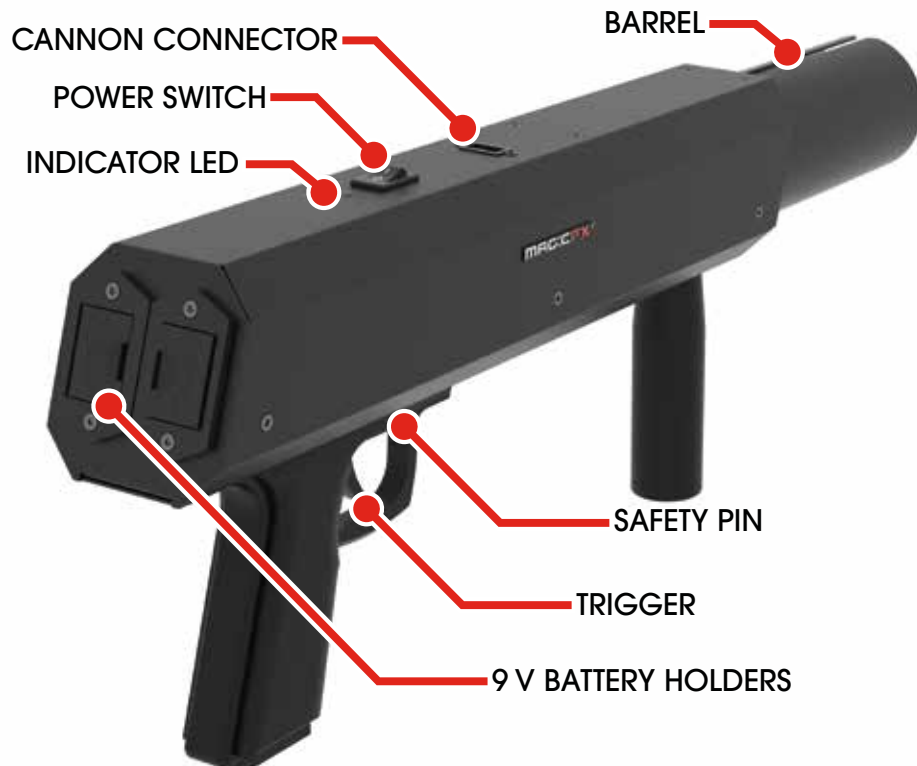

## TECHNICAL DATA

<b>Product</b>	Product Name	MAGICFX® DEEJAY SHOTGUN	
	Product Code	MFX0371	
	Product Type	CONFETTI & STREAMER FX	
<b>Main Dimensions</b>	Length	505 mm	19.8 in
	Width	190 mm	7.48 in
	Height	75 mm	2.95 in
<b>Weight</b>	Weight	2.6 kg	5.73 lb
<b>Environment</b>	Minimum Temperature	0 °C	32 °F
	Maximum Temperature	60 °C	122 °F
	Humidity (Relative)	20 % to 90 % (non condensing)	
<b>Noise Level</b>	dB(A)	91.6 at 20 cm (7.87 in)	
<b>Electrical</b>	Voltage Input	2 x 9 V Batteries	
<b>Controlling</b>	Control Options	Manual Trigger	
<b>Usage</b>	Consumable(s)	MAGICFX® Electric Cannons	

## SAFETY RULES

- Only authorised persons may work with the MAGICFX® DEEJAY SHOTGUN.
- Do not use the MAGICFX® DEEJAY SHOTGUN if there are people or animals in the direct output.
- Make sure that children, unauthorised people and animals do not obtain access to the MAGICFX® DEEJAY SHOTGUN.
- Make sure there are no freestanding objects or objects that can be damaged by the MAGICFX® DEEJAY SHOTGUN within the output distance.
- Do not remove any safeguards, safety caps and safety symbols.
- All required safety devices must be in good condition and function properly.



 
**⚠ DANGER** Always keep the output zone as shown in the image above clear of all people, animals and objects. Not doing so can result in serious injury.

## LET'S SHOOT!

- 1 Place two 9 V batteries inside the battery holders and switch the MAGICFX® DEEJAY SHOTGUN ON. The LED indicates if the pistol is ready to fire. Pulling the trigger while the indicator led is still red can result in a delayed response. It can take up to 20 seconds for the LED to turn green, if it takes longer it is advised to replace the batteries.



- 2 Make sure the MAGICFX® DEEJAY SHOTGUN is switched OFF and the safety pin is in locked position before placing an electric cannon.

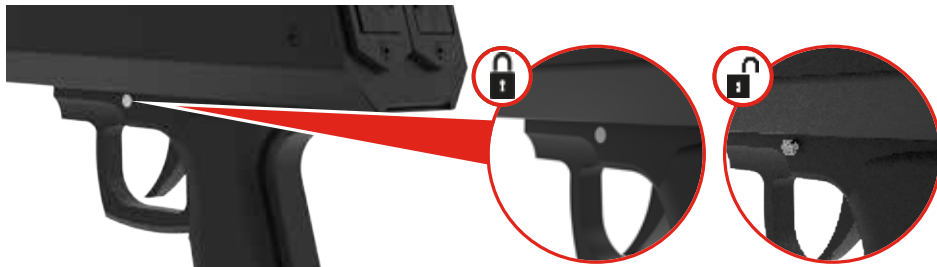

- 3 Firmly lock an unused electric cannon inside the barrel with the cable facing upwards.

 


- 4 Connect the power cable of the electric cannon.



- 5 Switch ON the MAGICFX® DEEJAY SHOTGUN and unlock the safety pin. Check if the LED lights up green, if not, it is advised to replace the batteries for a quicker trigger response.

- 6 Firmly hold with two hands and make sure the described safety zone is free of persons, animals or objects. When it's time to shoot, pull the trigger!

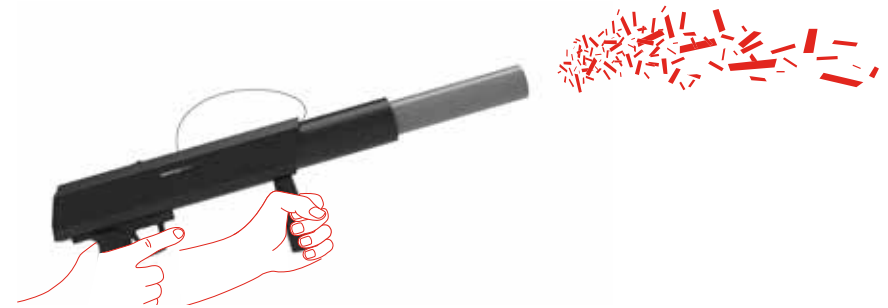

- 7 Switch OFF the MAGICFX® DEEJAY SHOTGUN and lock the safety pin.

Disconnect the power cable and remove the used cannon from the barrel and dispose it without harming the environment.

Reload or store the MAGICFX® DEEJAY SHOTGUN.